
IATA 打印系統

用戶指南

版本 1.0.1

目錄

1. 開始使用系統	3
1.1. 啟用系統	3
1.2. 設定系統	4
2. 打印標籤	5
3. 更換標籤紙、色帶，調整打印位置	6
3.1. 更換標籤紙	6
3.2. 更換色帶	7
3.3. 調整打印機	8


1. 開始使用系統

1.1. 啟用系統

- i) 在桌面雙擊 IATA.exe 按鈕。




- ii) 首次使用前用戶須先登入系統，請聯絡相關人員以取得用戶帳號。

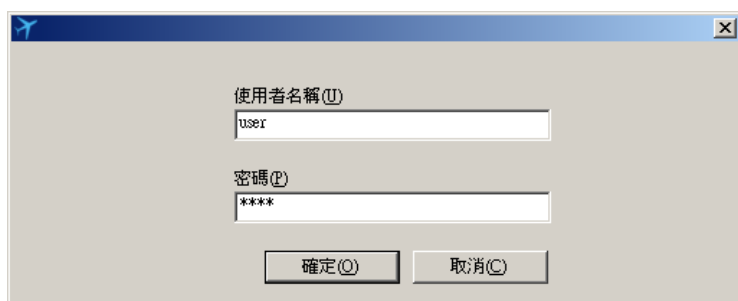

- iii) 登入後，用戶會進入使用介面。

先到 Setting，勾選 Auto Login，下次便會用此帳號自動登入。

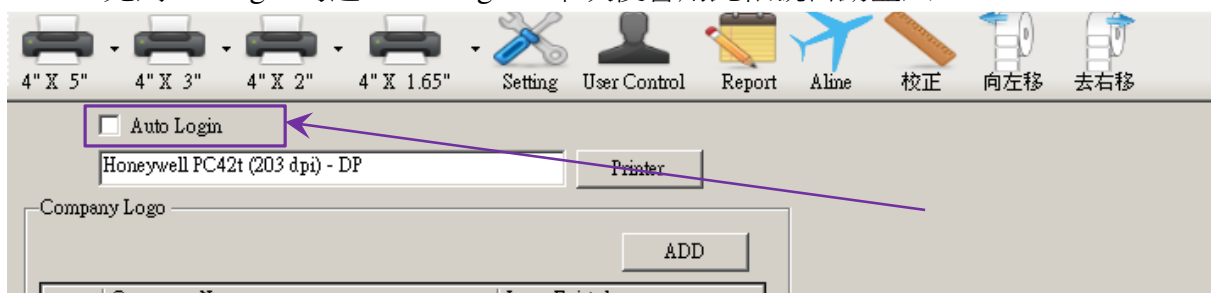

1.2. 設定系統

在正式打印前，先確認以下選項是否正確。

i) 在 Setting 介面，確認以下選項無誤。

1. 指定列印的打印機，如使用 PC42t 則無須設定



2. 按 ADD 新增公司名稱，如須加入 LOGO，則選旁邊空格從自己電腦中加入圖片


3. 完成後按 Set Default，以後打印標籤會一併顯示此公司名稱

ii) 在 Aline 介面，檢查常用 Airline 代號是否齊全。

1. 如需要另外新增 Airline 代號，按新增 Code

2. 打印標籤

i) 在主介面，點擊標籤大小旁邊的箭頭符號，然後選擇標籤類別。

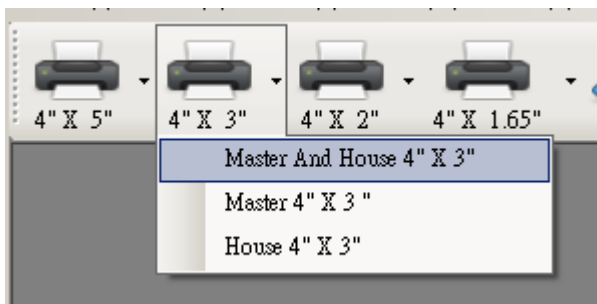

ii) 輸入物流編號資料，頁面右邊標籤的預覽樣式，檢查 Airline 號碼、目的地等是否正確。

A screenshot of the main data entry interface. It contains various input fields for shipping information. Callouts with numbers 1, 2, and 3 point to specific areas: 1. Points to the "AIR CHINA" label and the "AIR WAYBILL NO." field, with the text "1. 輸入 Airline 號碼，會自動生成相關名稱". 2. Points to the "DESTINATION" field (TYO) and the "HAWB" field (EA-38833), with the text "2. 輸入目的地編號，系統會自動轉換成國家標誌方便檢查". 3. Points to the "ABC Company" dropdown menu, with the text "3. 顯示公司名稱". The interface also includes checkboxes for "TOTAL NO. OF PCS" and "HAWB TOTAL PCS", a "QTY" field, and a "Print" button. At the bottom, there is a table with columns: Air_WayBill_No, DEST, Total, HAWB, DEPARTURE, and HOUSE_D.

iii) 在 QTY 輸入需要打印的數量。


剔選上方「顯示細數」的話會在條碼下方出現一組數字，後方「0001」為序列號。即如打印 4 張 99922679996 的標籤的話，該組數字會依序打印成 0001,0002,0003,0004。

A screenshot showing the "QTY" input field set to "4" and the "顯示細數" checkbox checked. Below this is a "Print" button. To the right is a preview of the label. The label contains the "AIR CHINA" logo, "AIR WAYBILL NO.", a barcode, and the number "999 2267 9996". Below the barcode, the text "999 2267 9996 0 0001" is visible. The label also includes "DESTINATION TYO" and "TOTAL NO. OF PCS 1".

3. 更換標籤紙、色帶，調整打印位置

3.1. 更換標籤紙


1) 打開頂蓋，並按前方兩個按鈕鬆開打印頭。

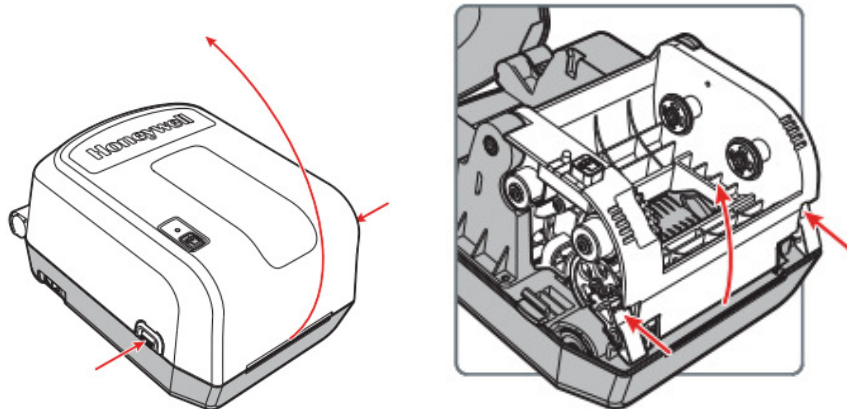

2) 把標籤放好在放置架上，然後透過打印機後方空位穿到前方並固定好。




3) 關上打印頭(緊記要確認兩邊均按好！)，並把頂蓋關上。


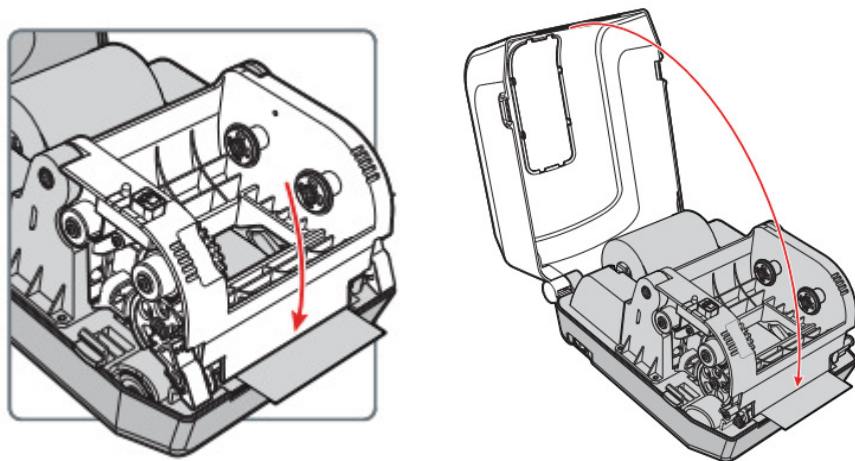


3.2. 更換色帶



1) 把色帶棍軸從舊色帶芯中抽出，然後插進新色帶芯裡。

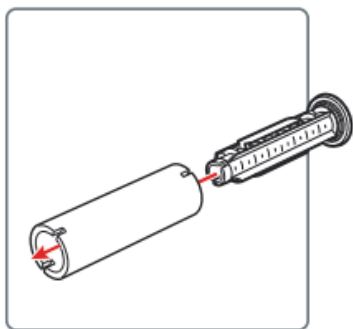

2) 把全新的色帶軸放在後方裝載架裡，回收軸則放在前方裝載架。

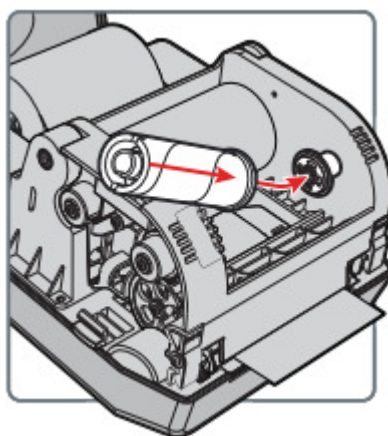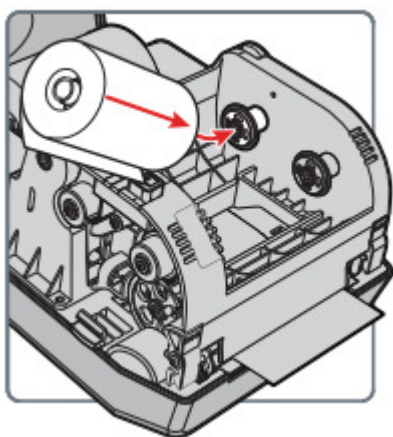


3) 把新色帶穿過下方空位，並貼在回收軸上面。迴卷幾次固定好位置之後關上打印頭。

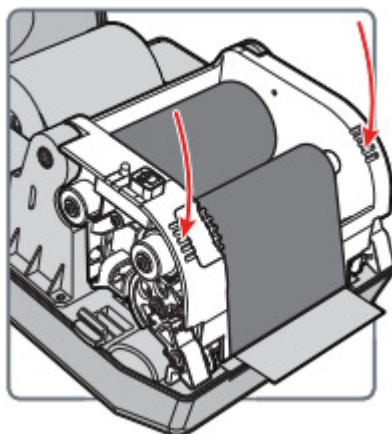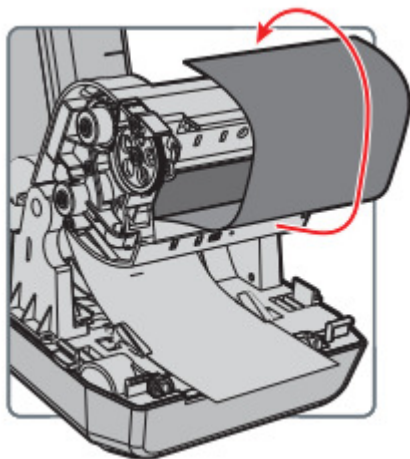

3.3. 調整打印機

- i) 如果打印機在更換標籤紙/色帶後，或打印中途突然發生問題中斷了打印，先把打印機重新啟動一次，然後到系統中按「校正」，待打印機重新調整好後再嘗試打印。

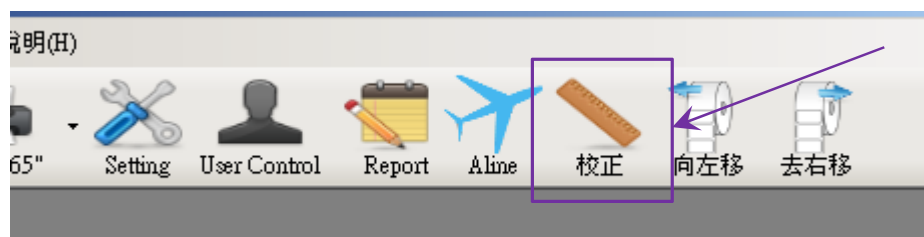

- ii) 如打印出來的標籤格式稍有位置偏移，可嘗試按以下按鈕微調位置。每個改動會移送 1mm。

